



EB-20 #1000-0020 BRAKE FLUID EXCHANGE

Adapter Usage 1-1-24 Tech Support 714-896-6700

All adapters shown are used in conjunction with the EBS Brake Fluid Exchange Equipment and ONLY TO BE USED FOR SERVICING VEHICLE BRAKE FLUID HYDRAULIC SYSTEMS. No other use is authorized or recommended – possible damage to vehicle/equipment



EB-20 #1000-0020 BRAKE FLUID EXCHANGE

Adapter Usage 1-1-24 Tech Support 714-896-6700

All adapters shown are used in conjunction with the EBS Brake Fluid Exchange Equipment and ONLY TO BE USED FOR SERVICING VEHICLE BRAKE FLUID HYDRAULIC SYSTEMS. No other use is authorized or recommended – possible damage to vehicle/equipment

Mits 3.0 #1100-0040 – Not in Standard Set
Used for Asian vehicles with a 3.0” screw on reservoir cap. Master Tool required.
The Brina I with Hold Down Adapter can also be used.



N-1 #1100-0175, N-2 #1100-0177, N-3 #1100-0185 Not in Standard Set
Nissan and Infinity vehicles from 2002 thru current – overlap between years.
Master Tool needed



Euro#1100-0150 – Standard Set
Used on European vehicles with screw on reservoir caps. Master Tool required.



LM #1100-0075 - Not in Standard Set
Used on GM vehicles - Lacrosse, Malibu etc.;
Master Tool required.



THN 2.9 #1100-0160 – Standard Set
Used on Asian vehicles that have a push on type reservoir cap.
Master Tool and Hold Down #1100-0020 required.



LT-2 #1100-0132 – Not in Standard Set
Used on Lexus GS, 300,460,470; IS 300, IS, LS, LX models and various Toyotas that have cap hold down in the interior of the reservoir neck. Master Tool required



Volvo #1100-0180 – Not in Standard Set
Used on Volvo vehicles. Also on some Fords, Lexus, Saturn, Honda, Kia and Saab. Master Tool required




HNMS #1100-0135 – Not in Standard Set
Used on Honda, Mazda, Nissan and Subaru
Master Tool required



B-Plate #1100-0250 – Standard Set
Covers all rectangular opening reservoirs. Integral chains secure adapter. Requires the Master Tool.



MSO #1100-0138 – Not in Standard Set
Various Nissan models – Sentra, etc. - 2006 to current. Master Tool required.

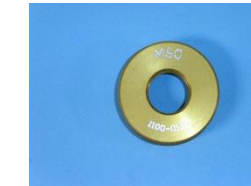

F-1 #1100-0055 and F-2 Adapter #1100-0057
Standard Set Not in Standard Set
Used on various Ford vehicles (2006 and newer) Fusion, etc. with ear attachment.
Requires the Master Tool.



THMN 2.2 E #1100-0165E – Standard Set
Used for Toyota and Honda vehicles that have ears on the reservoir cap. Master Tool and Hold Down #1100-0020 required.

